 


LELO

IRIS | PLEASURE OBJECT | user manual

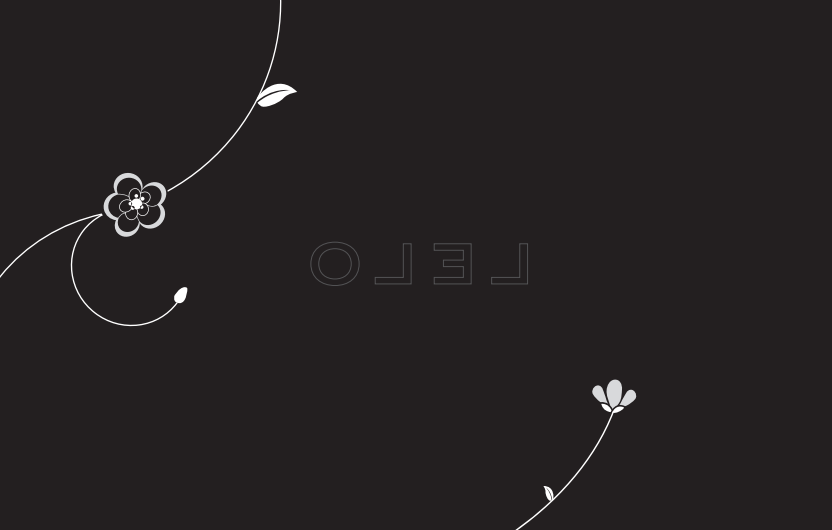

Congratulations on acquiring the IRIS pleasure object. Before getting more closely acquainted with your IRIS, please take a moment to review the information in this user manual.


TABLE OF CONTENTS

IRIS OVERVIEW.....	1
CHARGING.....	2
USING YOUR IRIS.....	3
SELECTING PLEASURE POINT(S).....	4
CLEANING, STORAGE AND SAFETY.....	5
TROUBLESHOOTING.....	6
WARRANTY CONDITIONS.....	7
DISPOSAL INFORMATION.....	8
SPECIFICATIONS.....	9

IRIS OVERVIEW

IRIS is a dedicated sensual massager, ergonomically designed to suit the natural curves of the female body. It is intended as an adult plaything only and is equipped with several traits that embody the elegance and ease of use that is to be expected from a LELO pleasure object.

The stem is endowed with two individually powered pleasure points and the handle features an intuitive interface dial . A LED indicator signals charge- and dial activities.

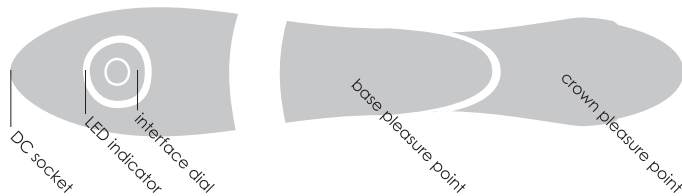

CHARGING

Before charging, make sure the DC socket is free from water or lubricant residue. Water is best removed by, with pouted lips, blowing into the DC socket itself.

1. Gently remove the protective silicon cap on the back of your IRIS .
2. Slowly insert the DC plug into the DC socket, deep enough to feel a subtle "click".
3. Insert the mains plug into the wall socket. The LED will pulsate to indicate that IRIS is charging. When IRIS is fully charged (ca. 3 hours) the LED will emit a steady sheen.

- Do NOT use your IRIS while charging.
- Do NOT charge for more than 24 hours.
- Only use original chargers provided by LELO.

If the battery is running low, the LED indicator will prompt you to charge by emitting a red sheen, as opposed to white, when the interface dial is pushed.


USING YOUR IRIS

On/Off, vibration intensity and stimulation patterns are all controlled with the interface dial. When either part of the dial is pressed, the LED will indicate that the interface is active.

1. Press the + quadrant of the dial to activate your IRIS. Keep pressing the + quadrant continuously until you reach the vibration intensity you desire.
2. To decrease vibration intensity, press the - quadrant of the dial until you reach the intensity you desire.
3. To turn Off, distinctly press the centre of the interface dial.

When travelling with your IRIS, always lock the interface dial to prevent accidental activation.


To lock or unlock, press the centre of the interface dial for 5 seconds. LED will de-activate / activate and dial is locked / unlocked.

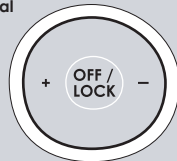

SELECTING PLEASURE POINT(S)

Your IRIS has five programmed stimulation modes revolving around the lengthwise interaction between the base- and crown pleasure points. The modes are designed to simulate a variety of massaging strokes and to facilitate rubdowns best suited to individual mood and preference. Vibration intensity can be controlled within each mode.

Press the \wedge or \vee quadrant of the interface dial to scroll the pleasure point- and stimulation pattern menu.

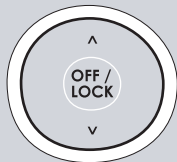

pattern	pleasure point(s)	characteristics
1	crown	continuous vibe - tip of stem
2	base	continuous vibe - base of stem
3	base & crown	short interval pulsation
4	base & crown	extended interval pulsation
5	base & crown	continuous vibe - full stem

CLEANING, STORAGE AND SAFETY

The lifespan of your IRIS will be greatly increased with proper maintenance and care.

LELO recommends that you NOT use silicone-based lubricants with IRIS as this could make the silicone top permanently tacky. If you wish to use a silicone-based lubricant, perform a patch-test first. Water-based lubricant is the safest option.

Always clean IRIS thoroughly before and after each use. Wash the stem with warm water and antibacterial soap, rinse with clean hot water and pat dry with a lint-free cloth or towel. Avoid submerging or getting water into the DC-socket or around the interface dial.

Never use massage oil or hand cream as lubricants or cleansers containing alcohol, petrol or acetone.

Avoid leaving your IRIS in direct sunlight and NEVER expose it to extreme heat.

Store your IRIS in a dust-free place and keep it away from toys of other materials.

TROUBLESHOOTING

LED does not pulsate when charger is connected?

- Battery is fully charged. Up to 4 hours of pleasure awaits you.
- Battery is drained and will require several minutes to acknowledge charger.
- Charger is not properly connected. Check wall- and DC sockets.

IRIS does not activate when the + quadrant of the interface dial is pushed?

- Battery is empty. Recharge your IRIS.
- Buttons are locked. Unlock by pushing the centre of the interface dial for 3-4 seconds.

If you experience any other problems with your IRIS or if you have any questions regarding its operation, please contact customercare@lelo.com

WARRANTY CONDITIONS

LELO warrants your IRIS for a period of ONE (1) YEAR, after the date of original purchase, against defects due to faulty workmanship or materials. If you discover a defect and notify LELO of the same during the warranty period, LELO will, at its option, replace the product to you at no additional charge. To activate your warranty, please complete the online warranty registration form on www.lelo.com > **customer care**.

The warranty is only valid upon presentation of reasonable evidence (i.e. completed online warranty registration form or purchase receipt) that the date of the claim is within the warranty period.

The warranty is not valid if the defect is due to accidental damage, misuse or neglect.

Due to hygienic reasons, LELO is unable to accept returns or exchanges of your IRIS for reasons other than as previously stated, once the packaging has been opened.

THE STATEMENTS ABOVE DO NOT AFFECT YOUR STATUTORY RIGHTS.

DISPOSAL INFORMATION

Disposal of old electronic equipment (applicable in the EU and other European countries with separate waste collection systems).



The crossed-out dustbin symbol indicates that your IRIS shall not be treated as household waste, but be handed over to the applicable collection point for recycling of electrical and electronic equipment. By ensuring your IRIS is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of the product. The recycling of materials will further help conserve natural resources.

For more information about the recycling of your IRIS, please contact your local household waste disposal service or your place of purchase.

Applicable accessories: charger

SPECIFICATIONS

MATERIALS.....PC-ABS/silicone
FINISH.....glossy/pearl

SIZE.....220 x 42 x 36 mm
WEIGHT.....208 grams

BATTERY.....Li-Ion 900 mAh 3.7 V
CHARGING.....3 h at 4.8 V 300 mA
USER TIME.....up to 4 hours
STAND-BY.....up to 90 days

FREQUENCY.....60-80 Hz
MAX. NOISE LEVEL.....< 50 dB


INTERFACE....variable interface dial

- **twin-engine pleasure points**
- **5 programmed stimulation modes**
- **LED interface / low charge indicator**
- **low charge intensity control**
- **intuitive interface dial**
- **interface travel lock**
- **splash proof**

© 2005-2006 LELoI AB. All rights reserved.
Designed in Sweden / assembled in PRC



The clitoris is the only feature of the human anatomy whose sole function is to convey messages of sensual pleasure. Use it wisely, often and with care.

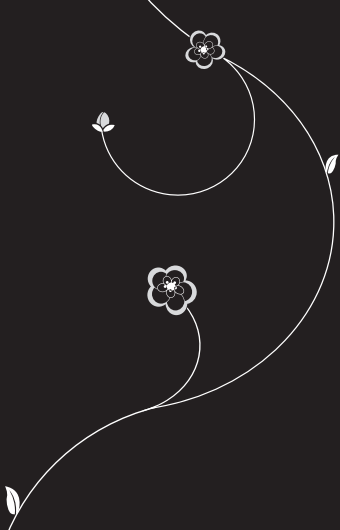

LELO

www.lelo.com

